



ONE PIECE SILL TAPE

The one piece combination flashing tape for superior waterproofing of window and door openings.

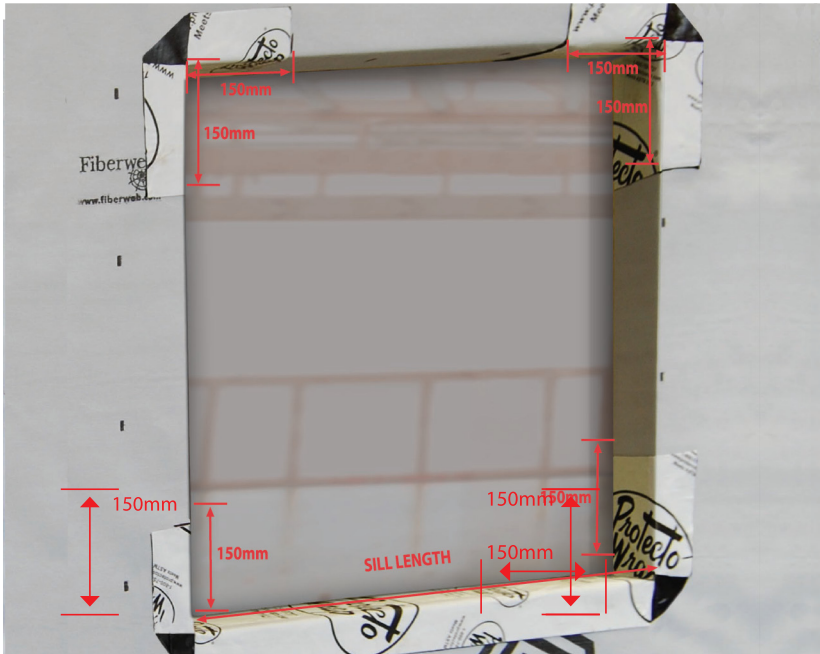

Installation

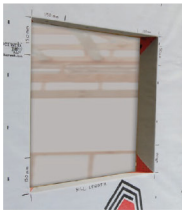

Cut and staple to wall underlay. Draw a mark 150mm up from bottom corners. Cut tape to length required. Sill length + 300m.



Apply Protecto Tak Primer to all areas that will be taped.



Starting at 150mm mark, apply tape down the frame and across the opening. Remove the backing paper as you apply tape.



Fold the top branded flap back into the opening. Stick the middle and ends of the bottom adhesive tape onto the wall underlay face.



Starting at one end, remove the release film and fold the rest of the tape onto the wall underlay.




Fold the branded flap forward.



Cut the branded flap at the corners and fold onto the membrane.

Top corner installation

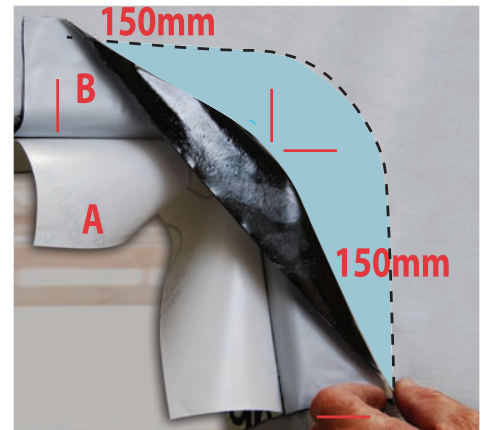

1. Cut a 300mm length of tape.
2. Apply Protecto Tak Primer to all areas that will be taped.
3. Remove backing paper.
4. Fold in half and fit into corner.
5. Fold the branded flap (A) back into opening.
6. Stick ends of adhesive tape (B) onto wall underlay.
7. Remove release film and fold remaining tape onto wall underlay.
8. Fold branded flap (A) forward.
9. Cut flap at corner and fold over the exposed tape.

BENEFITS

- Easily form seamless corners.
- Easy to quantify - sill length + 900mm per opening.
- Fast no waste one piece installation.
- 90 day UV stability.