

# PLASTERABLE TAPE

## PROTECTO TAPE

The waterproofing membrane tape for exterior protection solutions. Render/plasterable.




### PRIMER TABLE

	Protecto Tak	#100 VO C	Universal WB Primer
Polystyrene	✓	X	✓
Fibre Cement	✓	✓	✓
Masonry	X	✓	X
Steel	X	✓	X

Select correct primer from table

### Installation

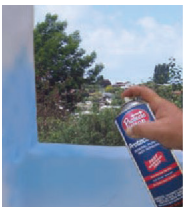


Apply primer and allow to tack off.



Apply Protecto Wrap Detail Tape where flashing is required.



Remove backing paper and apply Protecto Tape.

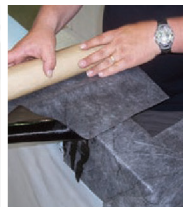

Cut and fold Protecto Tape to fit.



Apply JS160 Mastic to all overlaps and joins. NB: 100mm overlap required.



Trowel mastic smooth and press overlaps firmly together.



Press firmly all installed membrane to maximise adhesion.

### BENEFITS

- Fast and easy to install
- Can be plastered/rendered directly over
- 15 year product warranty
- Adaptable to fit most flashing requirements
- Zero waste as tapes can be overlapped
- Will self seal around mechanical fasteners as long as no pilot holes are drilled