

TRADE SILL SIZES

75mm x 25m
150mm x 25m
150mm x 10m
200mm x 25m
250mm x 25m

- Simple Installation
- Commercial & Residential Application



BRANZ Appraised
Appraisal No.712 [2012]

INSTALLATION



Cut and fix wall underlay into opening. Cut tape to sill length + 300mm.




Mark 150mm up each Jamb as a starting point for tape application.



Apply Protecto Tak Primer to all areas that will be taped.



Keep tape flush with the inside edge of the opening. Progressively remove backing paper, while applying down the jamb, tightly into corner, across sill and up opposite jamb.

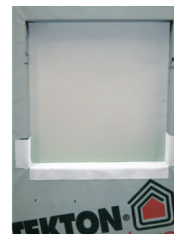

Slice tape back at corners, stopping 3mm from framing. Fold onto face of the framing.



HEAD - Cut a 300mm length of tape for each corner. Remove backing paper, fold in half with adhesive to the outside. Fit into corner and complete installation the same as for the sill corner.



Cut 4 pieces of tape 50mmx150mm. Diagonally overlap corner 3mm and press firmly into place to form a seal.

Benefits of Trade Sill

- No plastic corners.
- UV stable for 90 days.
- Super thin.
- Can be used on all wall underlays.
- Can be used on RAB Systems.